


# RF and LCD

The RF and LCD are audience response devices used when a presenter wants to gather immediate feedback from the audience.

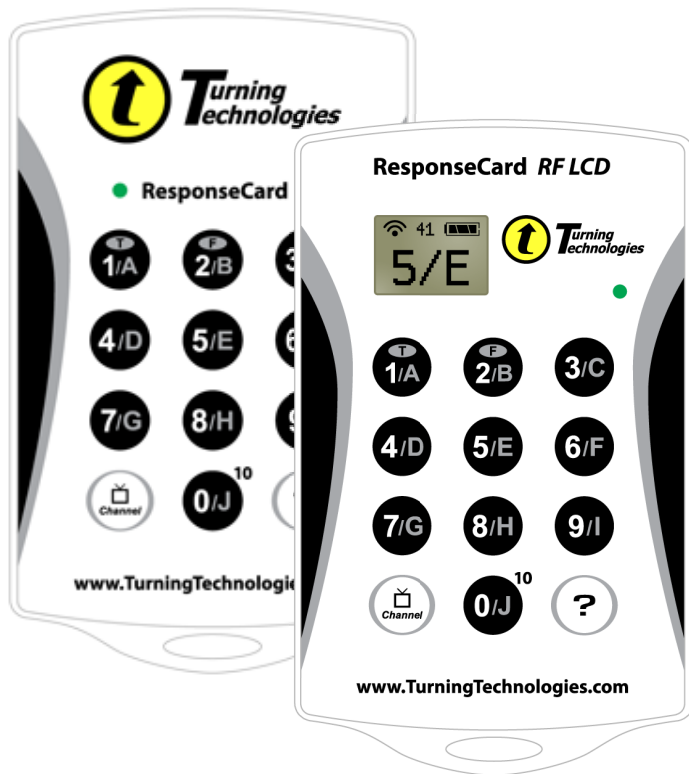

## CHANGING THE CHANNEL

1. Press the Channel, CH or GO button.
2. Enter the two-digit channel number. i.e. 07 or 52.
3. Press the Channel, CH or GO button.

A **green** flash indicates the channel was successfully changed.

## THE LCD SCREEN



When transmitting a response, the  symbol appears.

Verify the channel the device is set to, i.e. 41.

Determine battery life from the Battery Life indicator.

Verify your response on screen, i.e. 5/E.

## RESPONDING

- A **green** flash indicates that the response was received.
- Two **red** flashes indicate that the answer choice was invalid.
- A single **yellow** flash indicates that polling is closed.
- Multiple **yellow** flashes indicate that the response is sending.
- Multiple **yellow** flashes followed by a **red** flash indicate that the response was not received.